 


## 1. NAVIGATION OPERATION

### 1. Remote Touch

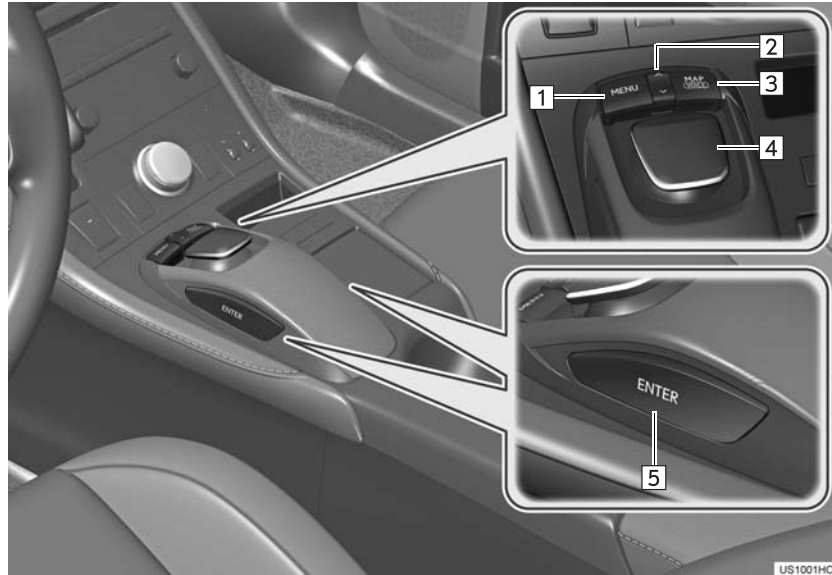

No.	Name	Function	Page
1	"MENU" button	Press to display the "Menu" screen.	22
2	"Λ·V" button	Press to change the scale of the map and to scroll the list screen.	34, 37, 49
3	"MAP/VOICE" button	Press to repeat a voice guidance, cancel the screen scroll, start guidance, and display the current position.	41
4	Remote Touch knob	Move in the desired direction to select a function, letter and map screen button.	34
5	"ENTER" button	Press to enter the selected function, letter or map screen button.	34

## 1. NAVIGATION OPERATION

## 2. MAP SCREEN



No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates whether the map orientation is set to north-up or heading-up. Selecting this symbol changes the map orientation. Both north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).	50
2	Scale indicator	This figure indicates the map scale.	49
3	Zoom out button	Select to reduce the map scale.	49
4	"<<< Off"	Select to obtain a broader view. Some of the buttons on the screen will not be displayed. They are displayed again by selecting "On >>>".	132
5	"Mark"	Select to register the current position or the cursor position as an address book entry.	42

No.	Name	Function	Page
6	"Route"	Select to change the route.	99, 101
7	"Show on Map"	Select to browse information about guidance route, to set the POI (Point of Interest) icons to be displayed on the screen, to record the route, etc.	106, 340, 365
8	Zoom in button	Select to magnify the map scale.	49
9	Foot print map button	Select to display the foot print map and the building information.	49
10	"Map Mode"	Select to display the "Map Mode" screen.	46
11	Distance and time to destination	Select to display the distance, estimated travel and arrival time to the destination.	98
12	XM indicator	This mark is displayed when XM information is received.	338, 340
13	"GPS" mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	141

\*: Press and hold the "PWR·VOL" knob for 3 seconds or more to turn off the screen and restart the navigation system. Do this when the vehicle-mounted device response is extremely slow.


#### INFORMATION

- Remove dirt from the display and its surrounding area by lightly wiping with a soft, dry cloth, such as a cloth used for cleaning glasses with plastic lenses. Scrubbing too hard or using a hard cloth could scratch the display. Also, the display is treated with a coating, and could be damaged by coming into contact with benzine or alkaline solution.
- When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

## 1. NAVIGATION OPERATION

### 3. REGISTERING HOME

- 1 Press the "MENU" button on the Remote Touch.

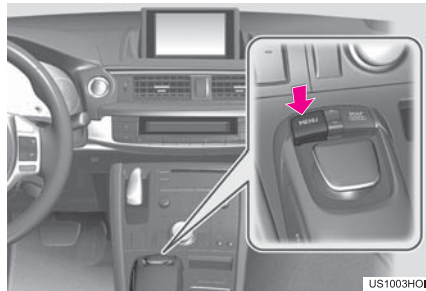

- 2 Select "Destination" and press the "ENTER" button on the Remote Touch.



- 3 Select "Go Home" and press the "ENTER" button on the Remote Touch.



If a home address has not been registered, it can be registered by selecting "Go Home".

- 4 Select "Yes" and press the "ENTER" button on the Remote Touch.



- 5 There are 4 different methods to search your home. (See "DESTINATION SEARCH" on page 70.)




- 6 Select "Enter" and press the "ENTER" button on the Remote Touch.



The "Edit Home" screen is displayed.

- 7 Select "OK" and press the "ENTER" button on the Remote Touch.

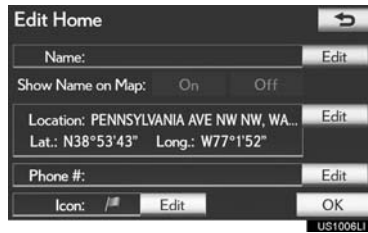

Registration of home is complete.

Home can also be registered by selecting **"Navigation"** on the "Setup" screen. (See "REGISTERING HOME" on page 111.)


The name, location, phone number and icon can be changed. (See "EDITING HOME" on page 112.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 71.)

## 1. NAVIGATION OPERATION

### 4. REGISTERING PRESET DESTINATIONS

- 1 Press the "MENU" button on the Remote Touch.

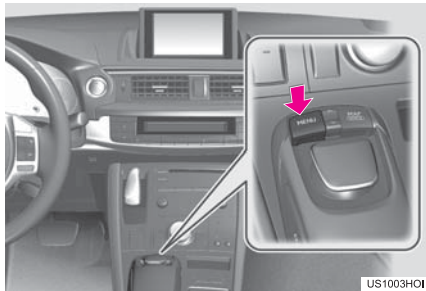

- 2 Select "Destination" and press the "ENTER" button on the Remote Touch.



- 3 Select one of the preset destination buttons and press the "ENTER" button on the Remote Touch.



A preset destination can be set to any preset destination button that has not yet been set.

- 4 Select "Yes" and press the "ENTER" button on the Remote Touch.



- 5 There are 4 different methods to search preset destinations. (See "DESTINATION SEARCH" on page 70.)




- 6 Select "Enter" and press the "ENTER" button on the Remote Touch.



The "Edit Preset Destination" screen is displayed.

- 7 Select "OK" and press the "ENTER" button on the Remote Touch.

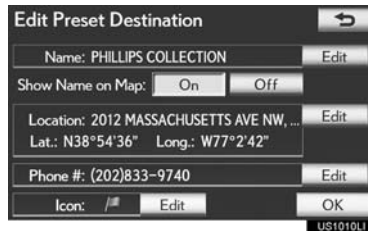

Registration of preset destinations is complete.

Preset destinations can also be registered by selecting "**Navigation**" on the "Setup" screen. (See "REGISTERING PRESET DESTINATIONS" on page 114.)


The name, location, phone number and icon can be changed. (See "EDITING PRESET DESTINATIONS" on page 115.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY PRESET DESTINATIONS" on page 71.)

## 1. NAVIGATION OPERATION

### 5. OPERATION FLOW: GUIDING THE ROUTE

- 1 Press the "MENU" button on the Remote Touch.

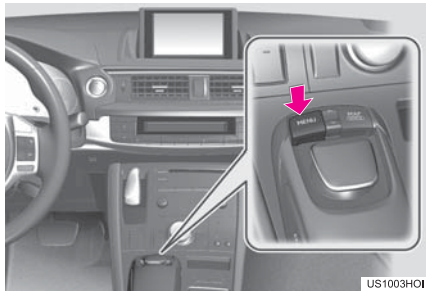

- 2 Select "Destination" and press the "ENTER" button on the Remote Touch.



- 3 There are 11 different methods to search destinations. (See "DESTINATION SEARCH" on page 70.)

► Page 1



► Page 2



- 4 Select "Go to" and press the "ENTER" button on the Remote Touch.



The navigation system performs a search for the route.

- 5 Select "OK" and press the "ENTER" button on the Remote Touch. Then start driving.




Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 89.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

## 1. NAVIGATION OPERATION

### 6. SETTING HOME AS THE DESTINATION

- 1 Press the "MENU" button on the Remote Touch.

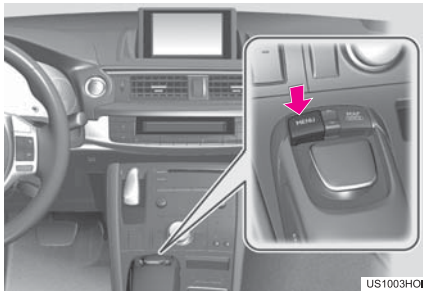

- 2 Select "Destination" and press the "ENTER" button on the Remote Touch.




- 3 Select "Go Home" and press the "ENTER" button on the Remote Touch.



"Go Home" can be used if your home address has been registered. (To register home, see "REGISTERING HOME" on page 111.)

Your home address is set as the destination. The navigation system performs a search for the route.

- 4 Select "OK" and press the "ENTER" button on the Remote Touch. Then start driving.

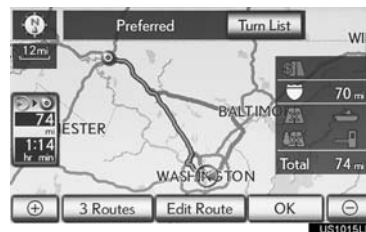

Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 89.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

## 2. FUNCTION INDEX

### 1. NAVIGATION SYSTEM FUNCTION INDEX

#### ► Map

Displaying maps	Page
Viewing the map screen	12
Displaying the current position	41
Viewing the current position vicinity map	41
Changing the scale	49
Changing the map orientation	50
Displaying Points of Interest	106
Displaying the estimated travel/arrival time to the destination	98
Selecting the map mode	46
Deleting map screen buttons	132
Displaying traffic information	339

Searching destinations	Page
Searching the destination	70
Changing the selected search area	70
Operating the map location of the selected destination	89

#### ► Route guidance

Before starting route guidance	Page
Setting the destination	89
Viewing alternative routes	90
Starting route guidance	89

Before starting or during route guidance	Page
Viewing the route	89
Adding destinations	99
Changing the route	101
Displaying the estimated travel/arrival time to the destination	98

During route guidance	Page
Pausing route guidance	105
Adjusting route guidance volume	65
Deleting the destination	100
Displaying the entire route map	102

## ► Useful functions

Address book	Page
Registering address book entries	116
Marking icons on the map	118

Information	Page
Displaying vehicle maintenance	135


Hands-free system (for cellular phone)	Page
Initiating Bluetooth®	148
Making a call on a Bluetooth® phone	158
Receiving a call on the Bluetooth® phone	166

Voice command system	Page
Operating the system with your voice	306

### 3. QUICK REFERENCE

## 1. "Menu" SCREEN

Press the "MENU" button on the Remote Touch to display the "Menu" screen.

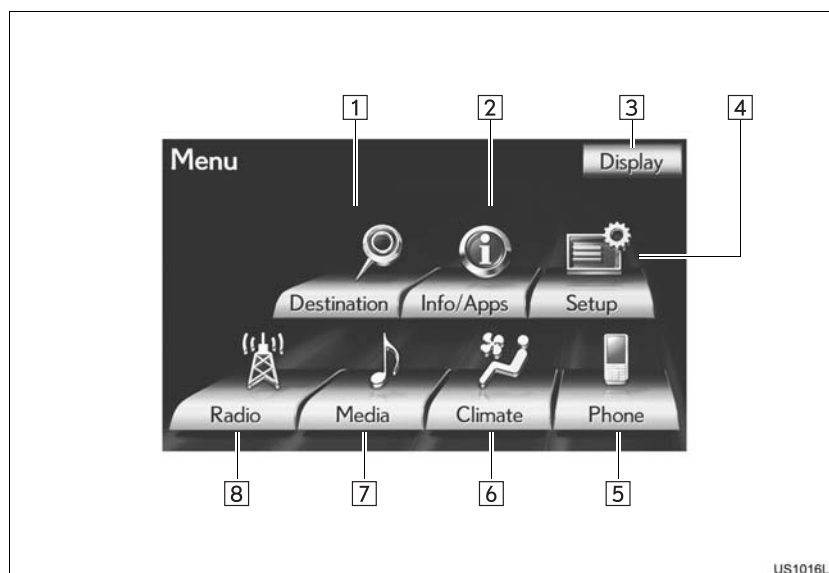


No.	Name	Function	Page
1	"Destination"	Select to display the "Destination" screen.	14, 16, 18, 19, 24, 70, 361, 363
2	"Info/Apps" ("Info")	Select to display the "Information" screen. For vehicles sold in Canada, "Info" is used instead of "Info/Apps".	28, 320, 325, 328, 331, 335, 339, 354, 357, 366
3	"Display"	Select to adjust the contrast and brightness of the screens, turn the display off, etc.	39
4	"Setup"	Select to display the "Setup" screen.	26, 52, 64, 110, 127, 135, 173, 195, 287, 342, 369
5	"Phone"	Select to display the hands-free operation screen.	153
6	"Climate"	Select to display the air conditioning control screen.	292
7	"Media"	Select to display the media control screen.	211
8	"Radio"	Select to display the radio control screen.	211

### 3. QUICK REFERENCE

## 2. “Destination” SCREEN

The “Destination” screen enables a destination search. Press the “MENU” button on the Remote Touch, then select “Destination” to display the “Destination” screen.

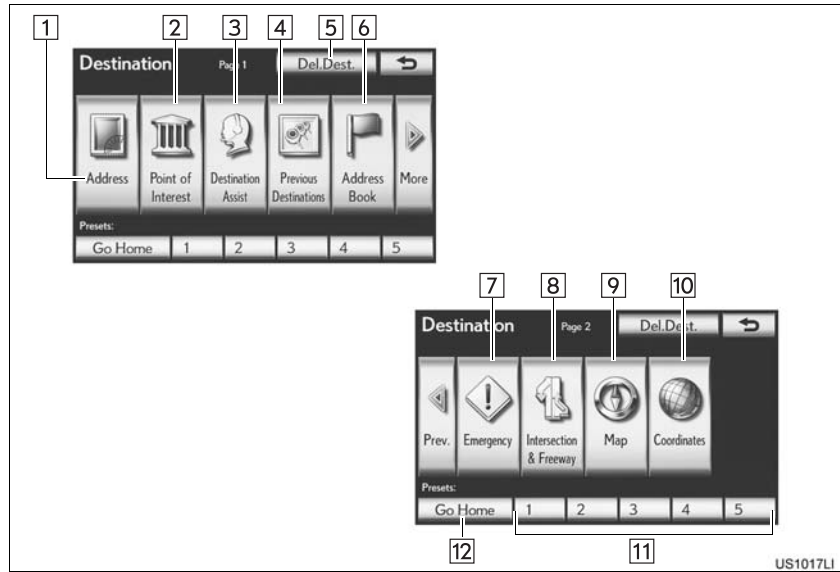


No.	Name	Function	Page
1	“Address”	Select to input a house number and the street address using the input keys.	72
2	“Point of Interest”	Select one of the POIs that have already been stored in the system’s database.	75, 363
3	“Destination Assist”	Select to provide you with live assistance finding destinations via the Lexus Enform with Safety Connect response center.	82, 361
4	“Previous Destinations”	Select a destination from any of the last 100 previously set destinations and from the previous starting point.	82
5	“Del.Dest.”	Select to delete set destinations.	88

No.	Name	Function	Page
[6]	"Address Book"	Select the desired location from a registered entry in "Address book". (To register address book entries, see "REGISTERING ADDRESS BOOK ENTRIES" on page 117.)	83
[7]	"Emergency"	Select one of the 4 categories of emergency service points that have already been stored in the system's database.	83
[8]	"Intersection & Freeway"	Select to enter the names of 2 intersecting streets or a freeway (interstate) entrance or exit. This is helpful if only the general vicinity, not the specific address, is known.	84
[9]	"Map"	Select to enable setting a destination by specifying a location on the map screen.	87
[10]	"Coordinates"	Select to enter latitude and longitude coordinates.	87
[11]	Preset destination buttons	Select one of the 5 preset destination points as a destination. If a preset destination point has not been registered, a message will be displayed asking if it is desirable to set a destination to the preset screen button. (To register a preset destination, see "REGISTERING PRESET DESTINATIONS" on page 114.)	71
[12]	"Go Home"	Select your personal home address without having to enter the address each time. If a home address has not been registered, a message will be displayed and the setting screen will automatically appear. (To register home, see "REGISTERING HOME" on page 111.)	71

### 3. QUICK REFERENCE

## 3. "Setup" SCREEN

The items shown on the "Setup" screen can be set. Press the "MENU" button on the Remote Touch, then select "Setup" to display the "Setup" screen.

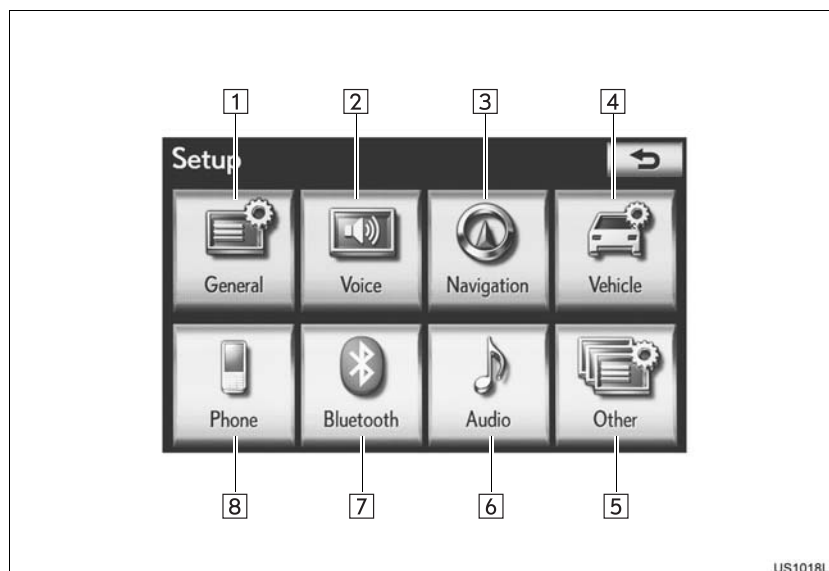


No.	Name	Function	Page
1	"General"	Select to change the selected language, operation sound, automatic screen change settings, etc.	52
2	"Voice"	Select to set the voice guidance settings.	64
3	"Navigation"	Select to set home, preset destinations, address book, areas to avoid, etc. or to delete previous destinations.	110
4	"Vehicle"	Select to set vehicle information such as maintenance information.	135
5	"Other"	Select to set Lexus Insider, XM Sports, XM Stocks and XM Fuel Prices.	342, 369
6	"Audio"	Select to set iPod and HD Radio™ channel settings.	287
7	"Bluetooth*"	Select to set Bluetooth® phones and Bluetooth® audio devices.	195
8	"Phone"	Select to set the phone sound, phonebook, message settings, etc.	173

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### 3. QUICK REFERENCE

## 4. "Information" SCREEN

This screen can be used to display the XM satellite system, fuel consumption, etc. Press the **"MENU"** button on the Remote Touch, then select **"Info/Apps"** ("Info") to display the "Information" screen.

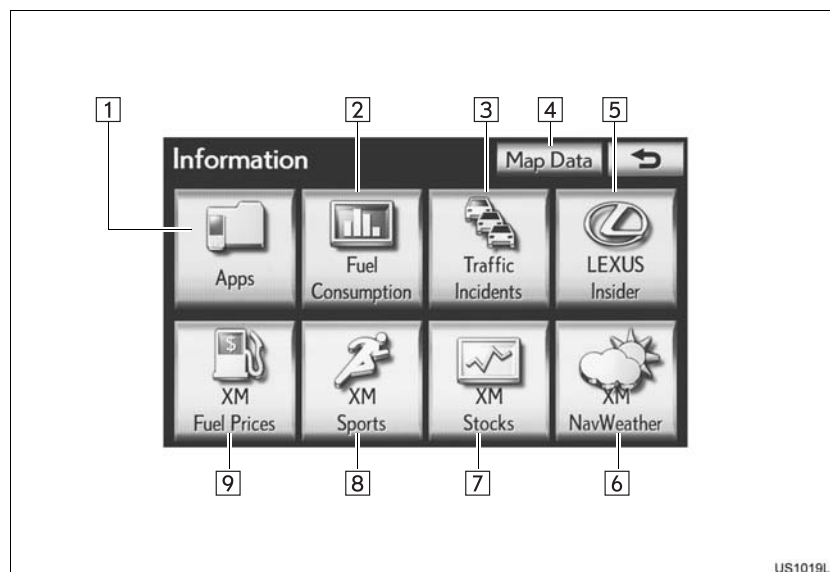

No.	Name	Function	Page
1	"Apps"	Select to display the "Apps" screen.	354, 357
2	"Fuel Consumption"	Select to display the fuel consumption screen.	Owner's Manual
3	"Traffic Incidents"	Select to display traffic incidents.	339
4	"Map Data"	Select to display map data information.	320
5	"LEXUS Insider"	Select to display the "LEXUS Insider" screen.	366
6	"XM NavWeather"	Select to display weather information.	335
7	"XM Stocks"	Select to display personally selected stocks information.	328
8	"XM Sports"	Select to display personally selected sports teams information.	325
9	"XM Fuel Prices"	Select to display current fuel prices and gas station locations information.	331

